

QCY-G1

电竞游戏耳机



 


使用前,请下载安装OCY手机APP客户端 以获得更便捷的且机操控体验

认识耳机

选择并组装耳套

中耳套适用于大多数人群,建议从中耳套开始试戴。





本说明书中的图片均为示意图,可能与实物有偏差,请以实 物为准。

耳机配对

开盖,取出耳机会自动开机,打开手机蓝牙搜索"QCY-G1"并 点击连接(若有连接记录,开机会自动重连最后连接的设备)



一键进入配对模式

1.耳机已经与手机配对。

2.耳机放盒子里, 打开充电盒盖子, 长按充电盒按键3秒至充 电盒科技蓝灯长亮, 耳机断开与手机的连接, 取出耳机, 进 入配对模式。

恢复出厂设置

双耳在充电盒里,长按充电盒按键10秒,耳机闪3次绿灯,复 位完成后耳机开机。



充电盒亮灯提示(开盖或按一下充电盒按键)

蓝灯: 充电盒中高电量 红灯: 充电盒低电量

充电盒合盖状态下橙灯呼吸则表示只有---个耳机在充电 或者有个耳机接触不良没有充电, 请重新摆放到位。



1. 使用产品前请仔细阅读本使用说明书并请妥善保管;

4. 必须选择正规厂家生产目经过国家CCC认证的充电器;

5. 若手机无法搜索到蓝牙耳机,请将蓝牙耳机重新进入配对

模式或将蓝牙耳机恢复出厂设置,若手机程序出错,请把

- 请勿以任何理由拆除或维修改装耳机,否则可能会导致起火,

- 请勿将产品置于温度过低或过高(0°C以下或45°C以上的环境

- 请勿在雷暴天气下使用该产品,雷暴可导致本产品工作不正

- 请避免靠近儿童或动物的眼睛使用产品指示灯;

3. 如果产品长期(超过2个星期)不用,请对其充电;

2. 首次使用时,请先将本产品充满电;

手机蓝牙关闭再开启或重启手机。

充电盒充电(支持无线充电)

充电中: 红色指示灯长亮 充满电: 绿色指示灯长亮

操作说明

功能操作



研 机:长按触控面板约1.5秒

(a) 关 机:把耳机放入充电盒

🕲 接听/挂断: 双击触控面板

护接电话:长按触控面板约1.5秒

► 上 一 曲: 长按左触控面板约1.5秒

▶ 下 一 曲: 长按右触控面板约1.5秒

● 语音互动:三击左耳触控面板

播放/暂停:双击触控面板播放/暂停

游戏模式:三击右耳触控面板

OCY蓝牙耳机售后服务

QCY蓝牙耳机售后服务承诺: 严格按照《中华人民共和国消费者权益保护 法》、《中华人民共和国产品质量法》实行售后三包服务,服务内容如下: 在三包有效期内,您可凭购物凭证依照本规定享受免费的修理、更换、退货

1、自您购买之日起7日内,本产品出现故障,经由OCY售后服务中心确定为产品 质量问题,可享受修理、更换、退货的服务。 2、自然购买之日起15日内,本产品出现故障、经由OCY售后服务中心确定为产

品质量问题,可享受修理或更换的服务。

3、自您购买之日起12个月内,本产品出现故障,经由OCY售后服务中心确定为 产品质量问题、可享受修理的服务。

售后服务与支持

自产品购买之日起12个月(请妥善保管购买凭证)。

在产品保修期内,凡属产品本身质量引起的故障,请用户凭购买凭证与经销商取 得联系以享受售后服务。 如有任何产品损害或瑕疵非可归责干产品质量本身,则不在保修范围内。有下列

情形者不属于保修范围内

、因天灾、地震、雷击、异常电压、环境因素而发生之故障或毁损的。 2、自行或委托未经原厂授权维修之厂商拆卸、改装或更换非原厂零件。

3、未按使用手册操作或因人为使用不当而造成损坏者,如产品浸水、腐蚀、掉 落、挤压或露在异常温湿度环境下。

三包凭证

产品信息

) HHIDADA	•																								
产品型号	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_
订单编号	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_
用户信息	:																								
用户姓名	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_
联系电话		_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_
用户地址		_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	-
退换货原因		_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_
购买信息	:																								
销售单位	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_

FAO

1.0: 只有一只耳机有声音怎么解决?

A: 将两只耳机放回充电仓关盖,再重新取出,查看双耳是 否都有声音, 若还是只有单只耳机有声音, 请对两只耳 机恢复出厂设置。

2.0: 手机提示无法连接怎么解决?

A: 将手机上的配对记录删除,删除后重新进行搜索配对连 接即可。

3.O: 听歌/通话没声音怎么解决?

A: 安卓手机在蓝牙连接名字的右边有个设置图标,点击进 入,关闭手机音频和媒体音频,再重新开启,若还是无 声,请将耳机重新与手机配对连接。

4.0: 为什么视频/游戏有延迟?

A: 受使用环境、网络、手机编解码等因素的影响,会引起 手机传送音频数据到耳机时有不同程度的延迟。

5.0: 听到的声音卡顿/断续怎么解决?

A: 在使用时若周围有大量的 Wi-Fi、5G/4G 信号、大功率 电器等等产生干扰,可能会引起卡顿、断续的情况,换 个环境或者重新配对连接就可以解决了。

若有售后服务需求, 请联系客服

电话: 4008-306-708 网址: www.gcy.com

制造商: 东莞市和乐电子有限公司 地址:广东省东莞市道滘镇粤晖路325号

产品中有害物质的名称及含量

			有害物质											
	部件名	3称	18 pb	汞 Hg	福 Cd	六价铬 Cr (VI)	多溴 联苯 PBB	多溴 二苯醚 PBDE	邻苯二 甲酸二 异丁酯 DIBP	邻苯二 甲酸 (2-乙酯) DEHP	邻苯二 甲酸二 丁酯 DBP	邻苯二 甲酸丁 苄酯 BBP		
Γ	耳机主	E体	X	0	0	0	0	0	0	0	0	0		
	电	池	0	0	0	0	0	0	0	0	0	0		
	耳	套	0	0	0	0	0	0	0	0	0	0		
	配	件	0	0	0	0	0	0	0	0	0	0		
	充 电	线	Х	0	0	0	0	0	0	0	0	0		

本表格依据SJ/T 11364的规定编制

- O:表示该有害物质在部件所有均匀材质中的含量均在(EU)2015/863 规定的限量要求以下。
- X:表示该有害物质至少在该部件的某一均质材料中的含量超出 (EU)2015/863规定的限量要求,但目前行业无成熟的替代方案, 在豁免范围仍符合欧盟ROHS指令的环保要求。

使用年限

如本手册所述,在正常使用条件下,本产品的环保使用期限为10年。 在此期间,产品不会泄露任何危险物质,本产品可以回收,必须按 照当地法规处理。











- 请勿用油及其他挥发性液体擦拭本产品;

电子击穿甚至彻底损坏本品;

常,并增加触电的危险;



QCY-G1
True Wireless Gaming Earbuds




For better using experience, please scan to download QCY app before start-up.

Overview

Choose Eartips

Please try middle eartips first as they fit most people.

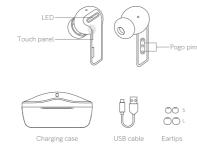

Above pictures are for reference only yet practical accessories may vary.

How to Connect

Open lid and pick up earbuds to power them on. On phone, search for QCY-G1 and tap to connect. Once again power on earbuds and they will auto reconnect to the last phone in connectivity records, if any.



One Press to Turn Connectable

- 1. Earbuds have been connected to phone.
- Push earbuds into case, open case and keep pressing button on case for 3s or until LED turns solid blue. Pick up earbuds again to turn them connectable to phone.

Factory Setting

Push earbuds into case and keep pressing button on case for 10s or until LED blinks green 3 times to reset and power on earbuds.



LED for Battery Level (Open lid or press button on case)
Battery level high&middle: blue

Battery level low: red

Only one earbud is charging properly if LED breathes orange with lid closed.

 


LED on Case(Wireless charging available)

How to Charge

LED will glow solid red when case is charging and glow solid green once it is topped up.

Instruction



- Power-on: keep touching the panel for 1.5s
- Power-off: push earbuds back in case
- Answer/end call: double touch the panel
- Ignore call: keep touching the panel for 1.5s
- Skip track backward: keep touching left panel for 1,5s
- Skip track forward: keep touching right panel for 1.5s
- (Voice assistant: triple touch left panel
- Playback/pause: double touch the panel
- Game mode: triple touch right panel

Warranty Card

Warranty Period

12 months after you purchase this item (or you may inquire your local shopper for more details).

Free Service:

Supposing any defects caused by quality issues occur within the warranty period , please take this warranty card and purchase receipts to your distributor for free exchange service.

Model Number:		
Date of Purchasing:		
User's Name:		
User's Phone:		
User's Address:		
Shop's Name:		
Shop's Address:		
Comments:		

Free exchange service will not be accessed under following circumstances:

- 1. Damages caused unauthorized disassembly.
- Defects or physical damages caused by leaking or dropping off.
- Damages by act of God. Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

FCC Statement

This equipment has been tested and found to comply with the imits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference for radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and receiver.

 --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hazardous substances and their contents in the item

	Hazardous Substances											
Part Name	Pb	Hg	Cd	Cr (VI)	PBB	PBDE	DIBP	DEHP	DBP	BBP		
Main body	Χ	0	0	0	0	0	0	0	0	0		
Battery	0	0	0	0	0	0	0	0	0	0		
Ear tips	0	0	0	0	0	0	0	0	0	0		
Accessories	0	0	0	0	0	0	0	0	0	0		
Charging cable	X	0	0	0	0	0	0	0	0	0		

This form is made by SJ/T 11364 regulation.

- O: means that hazardous substance content in the homogeneous materials of this part is within the limits of (EU) 2015/863 regulation.
- X: means that hazardous substance content in, at least, one certain homogeneous material of this part is beyond the limits of (EU) 2016/863 regulation, but there is no mature alternative in the industry at present, it still conforms to the EU ROHS Directive in the scope of exemption.

Notes: Please arrange using time properly as your hearing may be damaged by using the device for a long time. Manufacturer: Dongguan Hele Electronics Co., Ltd. Address: No. 325 Yuehui Rd. Daojiao Town Dongguan City Guangdong Province China









Caveats

or reboot the phone.

Tips

 Never disassemble or modify your earbuds for any reasons to avoid any damages and danger.

 Before using the earbuds, please read the manual carefully and keep it for future references.

2. The earbuds need to be fully charged prior to first-time use.

3. If the earbuds are left unused for over two weeks, please

4. Please use the chargers made by qualified manufacturer.

5. If earbuds fail to be found by phone, please re-turn them

connectable or restore factory settings. If a program error

of phone occurs, please turn off and on Bluetooth function

- Do not store the earbuds in extreme temperatures (under 0°C or over 45°C).
- Avoid using the indicator close to the eyes of children or animals.
- Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electricshock.
- Do not use harsh chemicals or strong detergents to clean the earbuds.

Note: please do not use earbuds for a long time as may damage your hearing.